




These instructions refer only to the installation of the roof flashing unit. Please refer to the guidance on Planning the Layout as described in the Sun Lite™ Tubular Rooflight Fixing Instructions.

## Initial work in the roof void

1. From inside the loft space mark the centre point for the desired location of the tube on the underside of the roof construction.
2. In order to locate the position when on the roof, drill a small hole through the underside of the roof construction / underlay and insert a piece of dowel or a screw as a guide.
3. The remainder of the installation work for the roof mounting unit will need to be carried out on the roof. You may find it useful to take some reference measurements of the position of the marker to aid finding its location when on the roof.

## External Installation Procedure

4. Locate the intended installation (if necessary by using the reference measurements as suggested in step 3 above). For existing roofs, remove the tiles in the area to expose the dowel or screw marker inserted earlier.
5. Position the roof flashing over the marker and check the position of the adjacent tiles. The design of the roof flashing is such that it will replace the tiles surrounding the entry point of the tube and it may be necessary to slightly relocate the entry point to allow full tiles to be removed. If so, check that the new position will not interfere with a rafter or other obstruction.
6. Remove tiles from the area to allow the base of the roof flashing to sit on top of the tiling battens.
7. With the roof flashing in the correct location, gently insert the starter tube until it makes contact with the battens. **DO NOT REMOVE THE PROTECTIVE FILM FROM INSIDE THE TUBE.** Carefully mark the inside line of the tube onto the face of the battens and the roof underlay.
8. Remove the roof flashing and starter tube and cut away the sections of the battens that pass through the marked circle.
9. Slit the underlay diagonally from two sides inside the circle to form 4 triangular shaped flaps. The flaps can then be folded away to the sides and the ends nailed to the top surface of the adjacent battens. Pull the underlay up slightly to create a raised area around the tube entry.
10. Replace the flashing unit in position ensuring that it is fully supported on the battens and fix using tile fixing nails. Replace the roof tiles around the edges of the flashing unit.
11. Now refer to the main fixing instruction to continue with the Sun Lite™ installation.

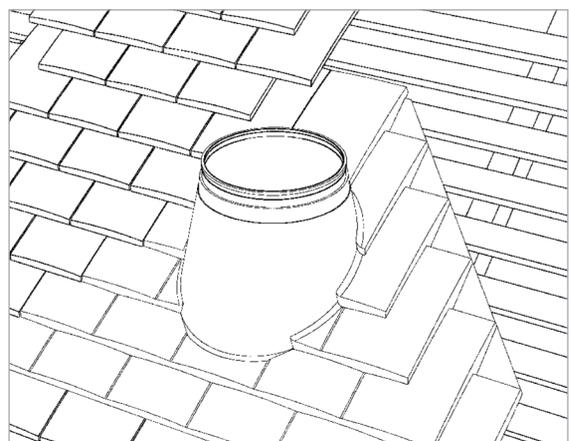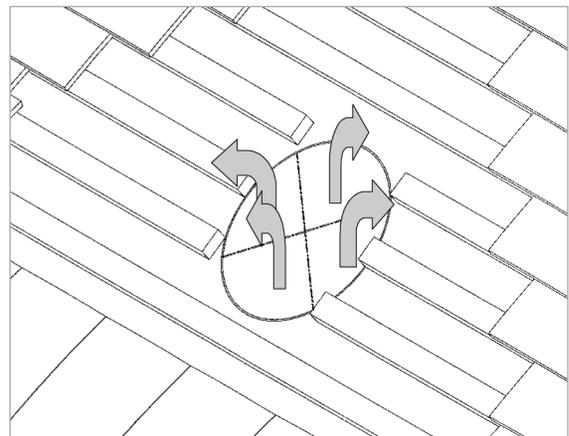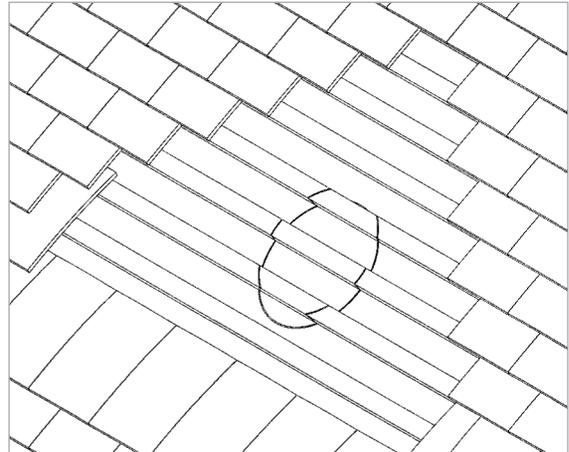

**Our Guarantee is valid only when the Flashing Unit is fitted according to these instructions.**

Keylite Roof Windows Ltd.,  
Derryloran Ind. Est.,  
Sandholes Road, Cookstown,  
Co. Tyrone BT80 9LU

Tel: 028 8675 8921  
Fax: 028 8675 8923

E-mail: [info@keylite.co.uk](mailto:info@keylite.co.uk)  
Website: [www.keylite.co.uk](http://www.keylite.co.uk)

Keylite Roof Windows Ltd.,  
Ryder Close, Cadley Hill Ind. Est.,  
Swadlincote,  
South Derbyshire DE11 9EU

Tel: 01283 200150  
Fax: 01283 223352

E-mail: [info@keyliteuk.com](mailto:info@keyliteuk.com)  
Website: [www.keylite.co.uk](http://www.keylite.co.uk)