



Remote Control Programming.

- Push and hold down the RC button in panel until the red LED is lit then release button.
- Push and hold any button on hand held remote control until red LED turns off then release button
- Push any button on hand held remote control until red LED begins to flash.
- RC has been programmed.

Dip switches

- All dip switches are set in the off position